
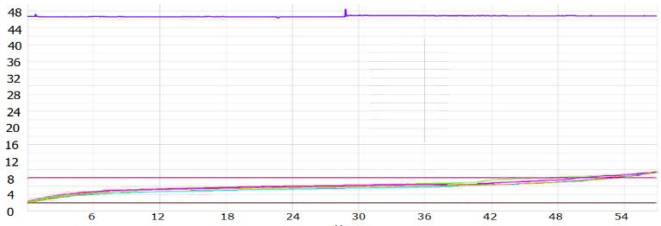


NOMAD cold chain shipper with digital thermometer

Product code: VPU-606

<p>Unique cutting edge vacuum/PU insulation Technology, developed and patented by the Cool Ice Box Company, offers the medical and food cold chain industries critical protection and thermal stability over a range of ambient temperatures from +43° to -25°.</p> <p>VPU-606 can hold temperature sensitive products, between +2° and +8° for about 60 hours in an ambient temperature of 35°.</p> <p>A large range of PCM Refrigerant options are available to meet cold life and holding temperatures required.</p>	
Usable cold space capacity / external dimensions	38L – 47.6 x 23.6 x 33.6 cm / 64.8 x 40.8 x 50.8 cm
Internal dimensions	59L – 52.8 x 28.8 x 38.8 cm
Weight including HTBH and PCM packs / excluding	25kg / 15kg
Refrigerant dimensions	PCM+5 (Pink), HTBH-505A /2 pcs. 50.5 x 36.5 x 2.6 cm + HTBH-515B/ 2pcs. 51.5 x 51.5 x 2.6 cm + HTBH-365A /2 pcs. 36.5 x 36.5 x 2.6 cm Total 15 kg/set.
Cold life from when lid closed to 8°	At +35° Ambient: Approximately 60 hours. (PCM +5°)
External cover	Polyester 1680D, 5mm PE Foam, 2mm aluminised PE foam inner with fabric hinge and #10 closing zip fastener
Shipper box	Hard laminated impact and stain resistant outer and inner cover panels
VPU insulation	60 mm Polyurethane rigid closed cell foam moulding, encapsulating 6 x VIP panels
VIP panel thermal conductivity / Panel thermal resistivity (R-value)	< 0.0035 W/m.K / > 6.0 m2K/W
Packing dimensions	70 x 46 x 57cm, 1pc per carton.
Digital thermometer	TPM-30 digital temperature display
	<p>Notes: This product contains no lead, mercury, cadmium, hexavalent chromium, polybromobiphenyls (PBB) or polybromodiphenylethers (PBDE) or benzene components. Cold Life will be affected by ambient temperature, direct sunlight, volume and density of contents, temperature of payload on loading, opening the lid of the box, and incorrect conditioning of the PCM cold packs.</p>

The Cool Ice Box Company Ltd.
27 Broad St, South Molton, Devon EX36 3AQ
UK Office no: 0845 565 1770 / 0843 277 7770
European Office: 00 33 (0) 553836230

www.coolicebox.com
info@coolicebox.com
NOMAD is the TM of The Cool Ice Box Company Ltd.

Registered Address:
13 Mill Street
Bideford, Devon
EX39 2JJ